

Pacific W4 Plus CPU Water Block









This product is intended for installation only by expert users. Please consult with a qualified technician for installation. Improper installation may result in damage to your equipment.


Before you start using this product please follow these basic guidelines:

1. Please carefully read through the instruction manual before beginning the installation process.
2. Please remove your graphics card from your motherboard to insure the safest process and in order to prevent any possible damages to your CPU and motherboard.
3. It is strongly recommended to use market proven pre-mix coolant, such as Thermaltake Coolant 1000.


Parts List

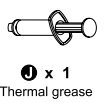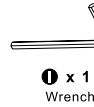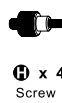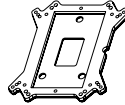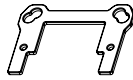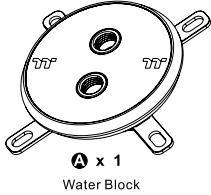



Intel LGA 775, LGA115x, LGA1366

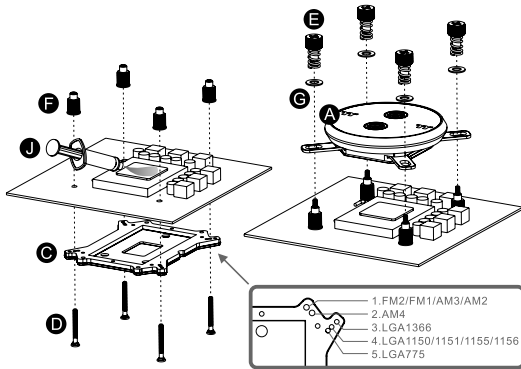


Intel LGA2011, 2011-3

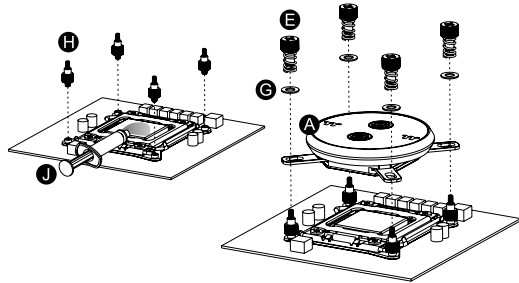

AMD

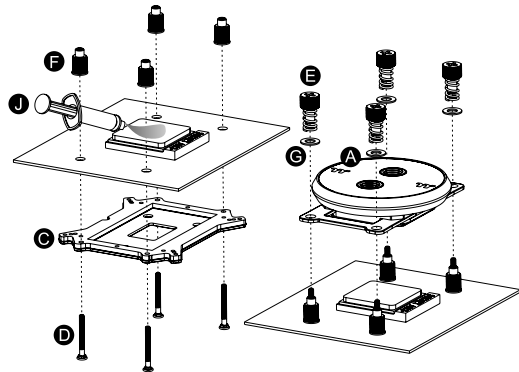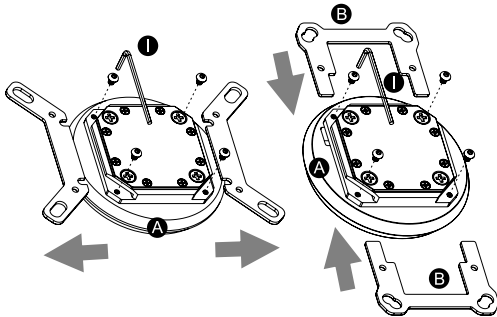


Controller Parts List

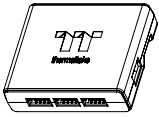


K x 1

Controller

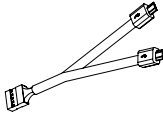


L x 1

Controller Cable

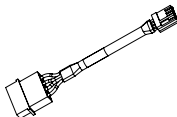


M x 1

Power Cable

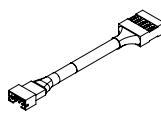

N x 1

Conversion cable

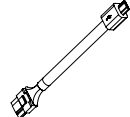

O x 1

Bridge Cable




P x 1

Velcro


Installation Guide

1

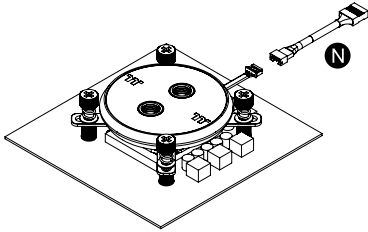


Install the Water Block on the mainboard properly, and connect the water block cable to the conversion cable.

2

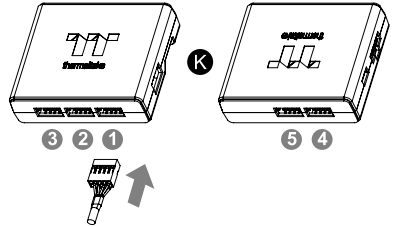

Connect the plug into the port in numerical order, start with plug one.

3

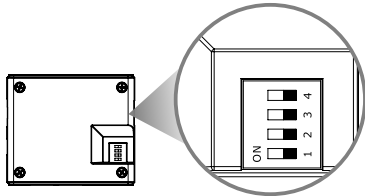

Set the DIP switch on the back side of the controller to assign the number of the controller

NO.1



NO.2



NO.3



NO.4



NO.5



NO.6



NO.7



NO.8



NO.9



NO.10



NO.11



NO.12



NO.13



NO.14




NO.15



NO.16




4

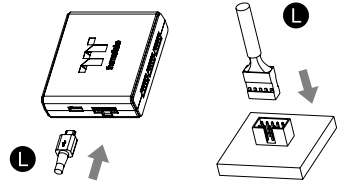


Connect the controller cable onto the mainboard (USB 2.0 9 pin) and controller.

5

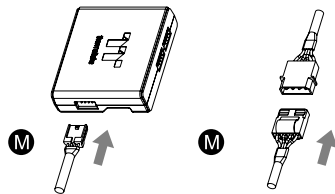

Connect the power cable to the 4pin Molex connector and controller.

6

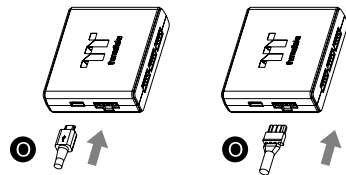

If you want to connect two or more connectors, you can use the bridge cable to connect the controllers.